

TRBOnet Enterprise/PLUS Phone Connect User Guide

Version 6.4

Last revised on 6 October 2025

USA Office

Neocom Software
150 South Pine Island Rd., Suite 300
Plantation, FL 33324, USA

Sales

EMEA: +44 203 608 0598
Americas: +1 872 222 8726
APAC: +61 28 607 8325

www.trbonet.com
info@trbonet.com

Contents

1	Introduction	2
1.1	About This Guide	2
1.2	About TRBOnet.....	2
1.3	Contacts.....	2
2	Overview.....	3
3	Configuration.....	4
3.1	TRBOnet Server	4
3.1.1	Phone Connect Advanced Settings.....	5
3.1.2	Internal PBX Server	6
3.1.3	External PBX Server.....	8
3.2	TRBOnet Dispatch Console.....	12
3.2.1	Radio Call Configuration.....	12
3.2.2	Inbound Call Configuration.....	14
3.2.3	Conference Configuration	17
3.2.4	Voice Message Loop Settings.....	17
3.2.5	Phone Calls Options	18
3.2.6	Adding Extensions.....	19
3.2.7	Call Redirection.....	20
3.2.8	Phone Contacts.....	21
3.2.9	Dial Plans.....	22
3.3	MOTOTRBO CPS	25
3.3.1	Repeater.....	25
3.3.2	Subscriber Radio	25

1 Introduction

1.1 About This Guide

This document is intended for administrators setting up evaluation and proof-of-concept deployments of MOTOTRBO Dispatch over IP solutions. The document describes the minimum steps to configure the Phone Connect feature in TRBOnet.

1.2 About TRBOnet

TRBOnet is a suite of professional applications for MOTOTRBO digital two-way radio networks. TRBOnet manages voice and data communication paths across network endpoints. It provides a unified graphical dispatcher workbench interface for the entire range of workforce fleet management tasks.

For more information about TRBOnet products, refer to our [website](#).

1.3 Contacts

Region	Phone	Email & Support
EMEA	+44 203 608 0598	info@trbonet.com — general and commercial inquiries
Americas	+1 872 222 8726	support@trbonet.com — technical support
APAC	+61 28 607 8325	https://trbonet.com/kb/ — online knowledge base

2 Overview

The Phone Connect feature is designed to extend the TRBOnet voice functions to SIP and PSTN endpoints. From the dispatcher's perspective, the multi-line phone connection becomes part of the voice dispatch workspace along with the radio PTT boxes.

When the feature is activated, the phone subscribers registered on the built-in or external SIP servers as well as PSTN users become first-class peers in TRBOnet: the phone calls can be joined to a conference with the radio subscribers, the phone endpoints can directly dial into and be reachable for the radios and the dispatcher, the audio messages can be sent to phones (played back when the number answers), etc.

TRBOnet includes an internal SIP PBX server. You can also create SIP trunk connections with external PBX servers or route calls to an external PBX server as if it is just another SIP endpoint.

3 Configuration


You will need to use the following three software tools to edit the configuration settings for the Phone Connect feature:

- TRBOnet Server
- TRBOnet Dispatch Console
- Motorola CPS to edit the codeplugs for the repeater and the radio stations


Follow the guidance below to configure the necessary Phone Connect-related settings.

3.1 TRBOnet Server

- Navigate to **Radio Systems > Repeater > Advanced settings** and from the **Phone System** list, select either 'Motorola Phone System' or 'TRBOnet Phone System (TX Interrupt)'.

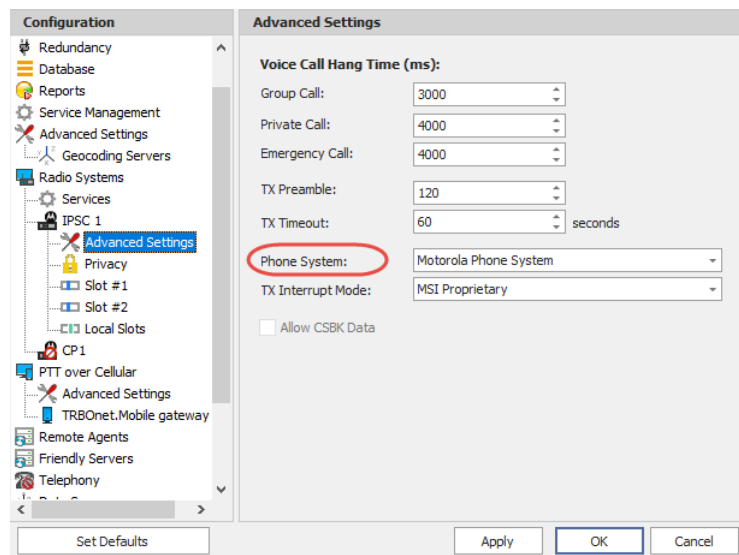


- In the **Configuration** pane, select **Phone Connect**.

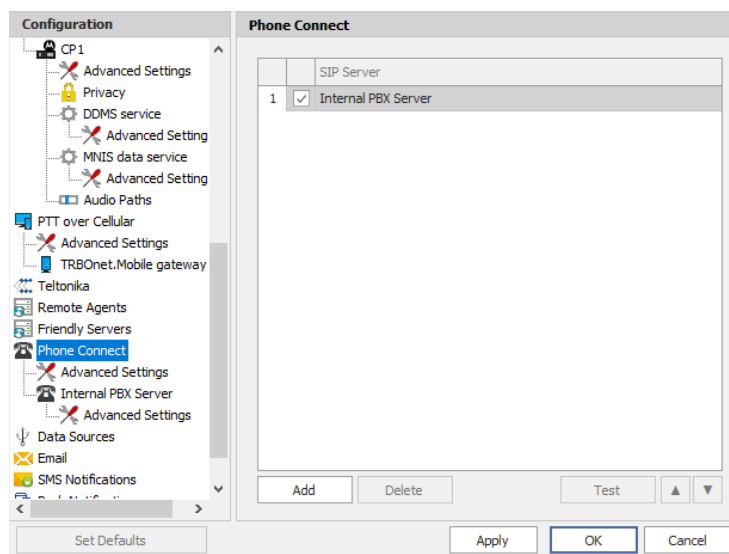

3.1.1 Phone Connect Advanced Settings

- In the **Configuration** pane, under **Phone Connect**, select **Advanced Settings**.

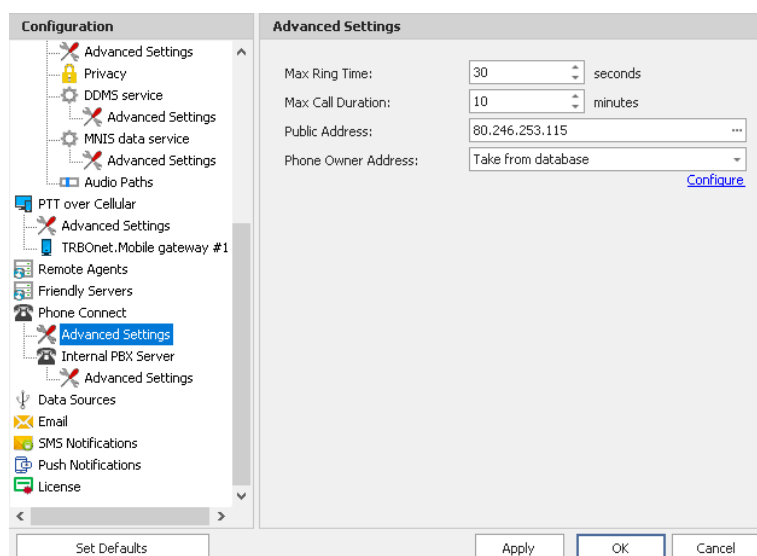


- In the **Advanced Settings** pane, specify the following parameters:
 - **Max Ring Time**
Specify the maximum ringing time, in seconds.
 - **Max Call Time**
Specify the maximum call time, in minutes.
 - **Public Address**
This is the public IP address of your PC. Enter the Public Address if your TRBOnet Server is behind a router and an [External PBX Server](#) will be used. To detect the public address, click the ellipsis (...) button.



- **STUN Server**
From the drop-down list, select the STUN Server.
- **Detect**
Click this button to detect your public IP address.


- **Phone owner address**
From the drop-down list, select 'Take from database'. This will enable determining the street address of a caller.
Click the **Configure** link.

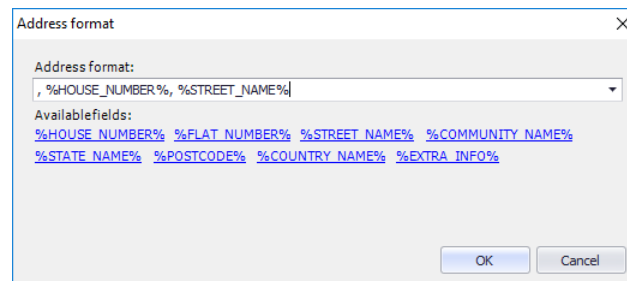

- Add the required fields to the address information.

3.1.2 Internal PBX Server

- Make sure the **Internal PBX Server** option is selected in the **Phone Connect** pane.
- In the **Configuration** pane, select **Internal PBX Server**.

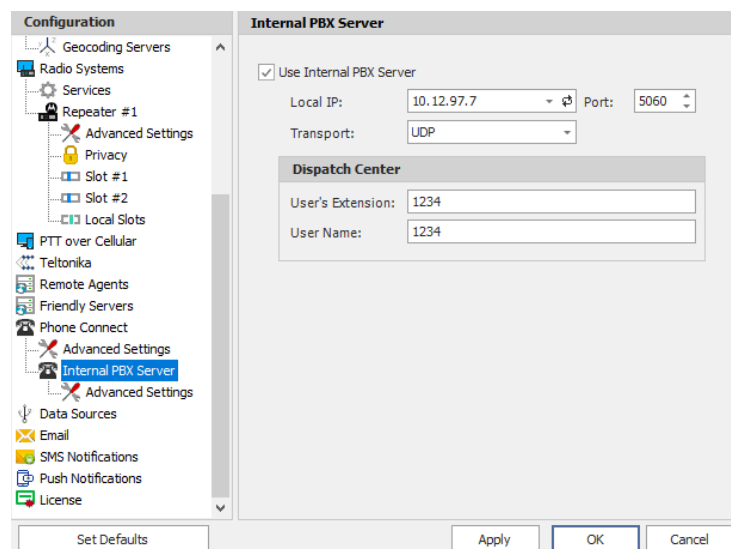

- In the **Internal PBX Server** pane, specify the following parameters:


- **Local IP**
Enter the IP address of the PC with TRBOnet Server.
- **Port**
Enter the local UDP port number for the SIP service (5060, by default).
- **Transport**
In the drop-down list, select one or more transport protocols (UDP, TCP, and/or TLS). Note that if **TLS** is selected, make sure that a valid certificate is specified in **Network > Server Certificate**.

Dispatch Center

- **User Extension**
Enter the user extension number that will be used by the Dispatch Center.
- **User Name**
Enter the user name that will be used by the Dispatch Center.

3.1.2.1 Advanced Settings

- In the **Configuration** pane, under **Internal PBX Server**, select **Advanced Settings**.

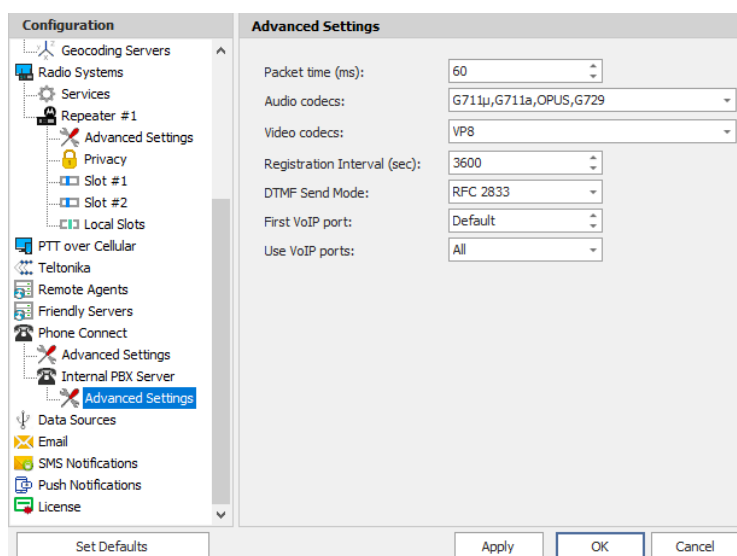


- In the **Advanced Settings** pane, specify the following Internal PBX Server-related advanced settings:
 - **Packet time**
Enter the packet length, in milliseconds.
 - **Audio codecs**
In the drop-down list, select/deselect the codec(s) to be used for audio compression.
 - **Video codecs**
In the drop-down list, select/deselect the codec(s) to be used for video compression.

- **Registration Interval (sec)**
Enter the time interval, in seconds, to check the SIP registration status of subscribers.
- **DTMF Send Mode**
Enter mode for sending DTMF tones. The available modes are RFC 2833, SIP INFO (DTMF relay), and SIP INFO (DTMF).
- **First VoIP port**
Enter the number of the first VoIP port for audio communications
- **Use VoIP ports**
From the drop-down list, select which VoIP ports will be used (all, even, or odd).

3.1.3 External PBX Server

You can enable multiple external PBX servers to use the SIP Interconnect feature. This feature enables calls from the radio to the phone and vice versa. The dispatcher can make a call from the Dispatch Console to a phone as well as redirect a phone call to a subscriber radio.

- In the **Phone Connect** pane, click **Add**.
Or, in the **Configuration** pane, right-click **Phone Connect** and choose **Add PBX Server**.

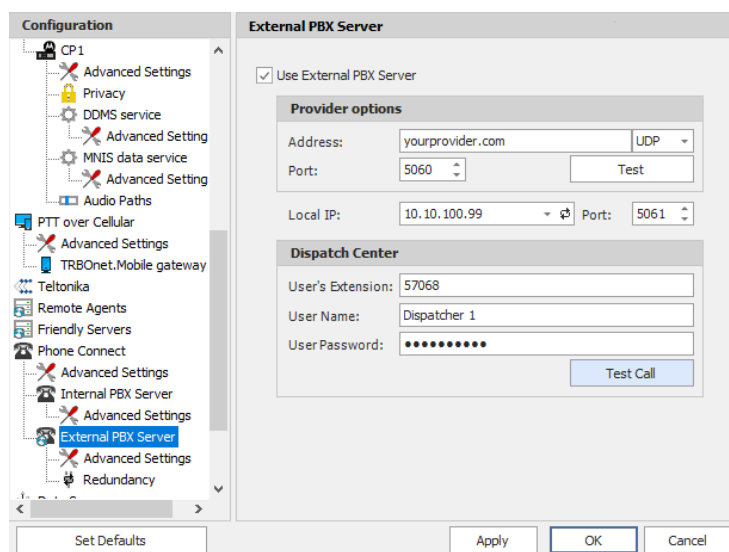

- In the **External PBX Server** pane, specify the following parameters:
 - **Use External PBX Server**
Select this option to enable an external PBX server.

Provider options

- **Address**
Enter your SIP provider address, and select the protocol from the drop-down list on the right of the address (for more details, contact your SIP provider).

- **Port**
Enter the port number of the SIP provider (5060, by default).
- Click **Test** to check the connection to the provider.
- **Local IP**
Enter the IP address of the PC with TRBOnet Server.
- **Port**
Enter the local port number to make connections from.

Dispatch Center


Note: This information is provided by the SIP provider.

- **User's Extension**
Enter the extension number that will be associated with TRBOnet Server to make and receive calls.
- **User Name**
Enter the user name for the login.
- **User Password**
Enter the user password for the login.
- **Test Call**
Click this button to make a test call.

Note: To make a test call, make sure that the TRBOnet Server service is not running.

3.1.3.1 Advanced Settings

- In the **Configuration** pane, under the corresponding **External PBX Server**, select **Advanced Settings**.

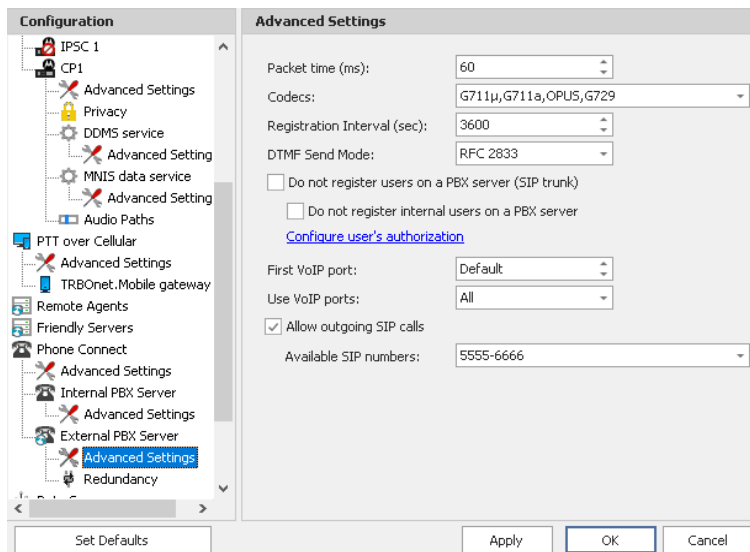


The screenshot shows the 'Configuration' pane on the left with a tree view. Under 'External PBX Server', 'Advanced Settings' is selected. The 'Advanced Settings' pane on the right contains the following fields:

- Packet time (ms): 60
- Codecs: G711μ,G711a,OPUS,G729
- Registration Interval (sec): 3600
- DTMF Send Mode: RFC 2833
- ☐ Do not register users on a PBX server (SIP trunk)
- ☐ Do not register internal users on a PBX server
- [Configure user's authorization](#)
- First VoIP port: Default
- Use VoIP ports: All
- ☒ Allow outgoing SIP calls
- Available SIP numbers: 5555-6666

Buttons at the bottom: Set Defaults, Apply, OK, Cancel.

- In the **Advanced Settings** pane, specify the following External PBX Server-related advanced settings:

- **Packet time**
Enter the same value as specified in the phone system;
- **Codecs**
In the drop-down list, select/unselect the codecs specified in the phone system.
- **Registration Interval (sec)**
Enter the time interval, in seconds, to check the SIP registration status of subscribers.
- **Do not register users on a PBX server (SIP trunk)**
Select this option so that radios will use the SIP trunk system to get extensions.
- **Configure user's authorization**
Click this link to set up user authorization for the systems with enhanced authorization parameters. It is recommended to be used when Radio ID is equal to SIP ID. In case when Voice is transmitted via Radio Channel, Radio ID is used. When voice is transmitted via GSM channel, SIP ID is used.

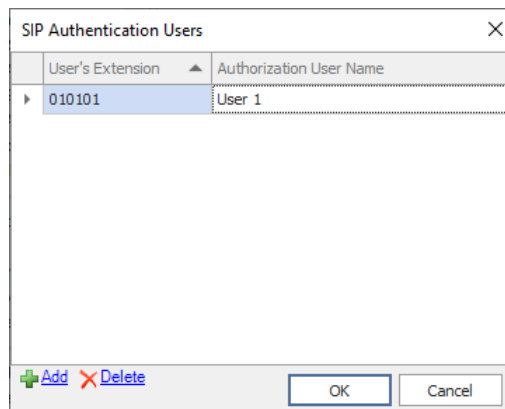

User's Extension	Authorization User Name
010101	User 1


+ Add X Delete OK Cancel

- Click **Add** to add a new user authorization.
- **User's Extension**
Enter the extension number for the new user.
- **Authorization User Name**
Enter the name that will be used as the authorization user name.
- Click **OK** to save the new user authorization.
- **First VoIP port**
Enter the number of the first VoIP port for audio communications. The default value is specified in Network Parameters.
- **Use VoIP ports**
From the drop-down list, select which VoIP ports will be used (all, even, or odd).
- **Available SIP numbers**
Enter the range of SIP phone numbers that will be available for outgoing calls.

3.1.3.2 Redundancy

A Redundant PBX Server be used when a connection to the main PBX Server fails.

- In the **Configuration** pane, under the corresponding **External PBX Server**, select **Redundancy**.

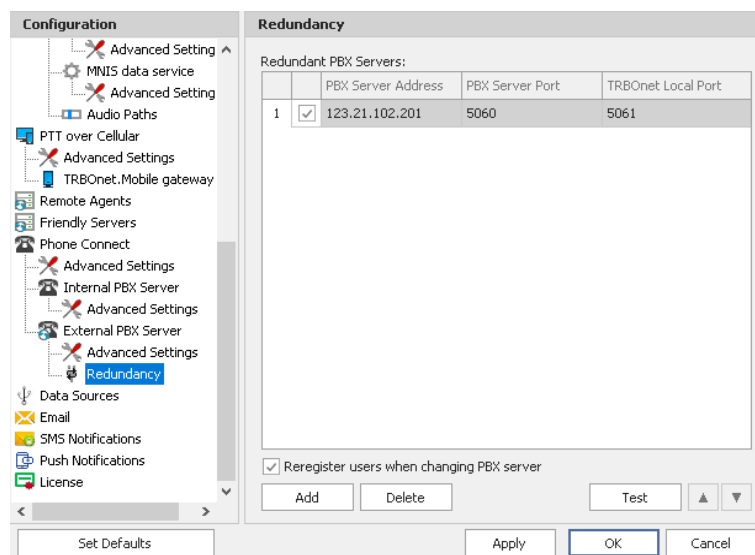


The screenshot shows the 'Configuration' pane on the left with 'Redundancy' selected under 'External PBX Server'. The 'Redundancy' pane on the right contains a table titled 'Redundant PBX Servers:' with columns: 'PBX Server Address', 'PBX Server Port', and 'TRBOnet Local Port'. A single row is visible with a checked checkbox, IP '123.21.102.201', port '5060', and local port '5061'. Below the table is a checkbox 'Reregister users when changing PBX server' which is checked. At the bottom are buttons: 'Add', 'Delete', 'Test', 'Apply', 'OK', and 'Cancel'.

	PBX Server Address	PBX Server Port	TRBOnet Local Port
1 <input checked="" type="checkbox"/>	123.21.102.201	5060	5061

- In the **Redundancy** pane, click **Add**.
 - **PBX Server Address**
Enter the IP address of the redundant server.
 - Check the corresponding port numbers (**PBX Server Port** and **TRBOnet Local Port**).
 - Select the check box beside the server address.
 - **Register users when changing PBX server**
Select this check box so that phone users will be registered when the PBX server is switched to the redundant server.


3.2 TRBOnet Dispatch Console

- Go to **Administration** (1), **Phone Calls** (2).
- In the **Phone Calls** pane, click the **Configuration** tab (3).

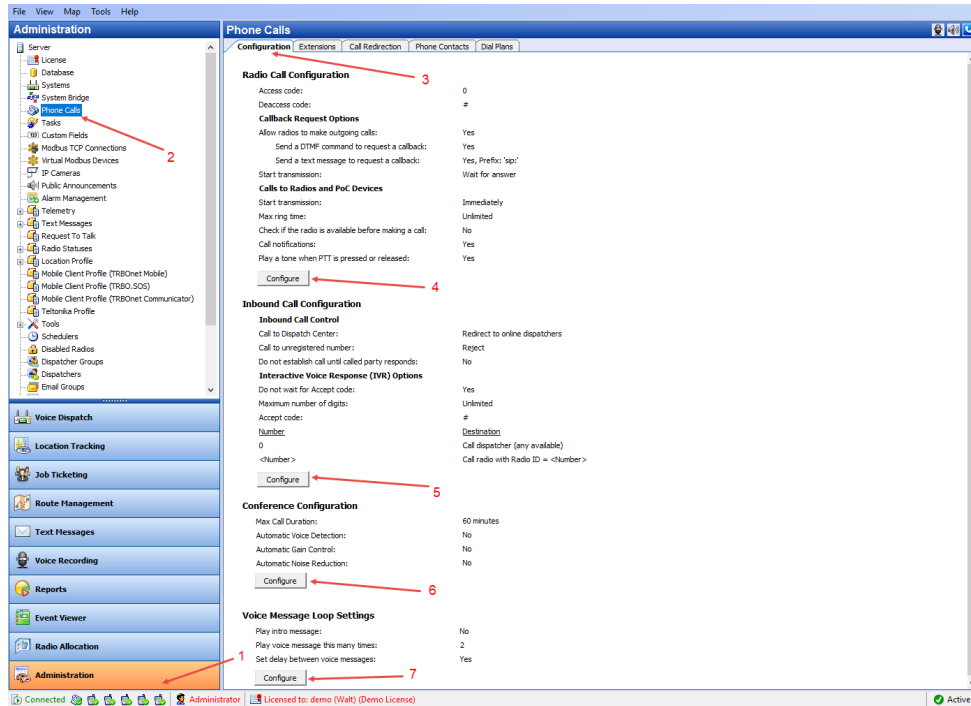

3.2.1 Radio Call Configuration

- Click the **Configure** button (4) to set radio call configuration parameters:

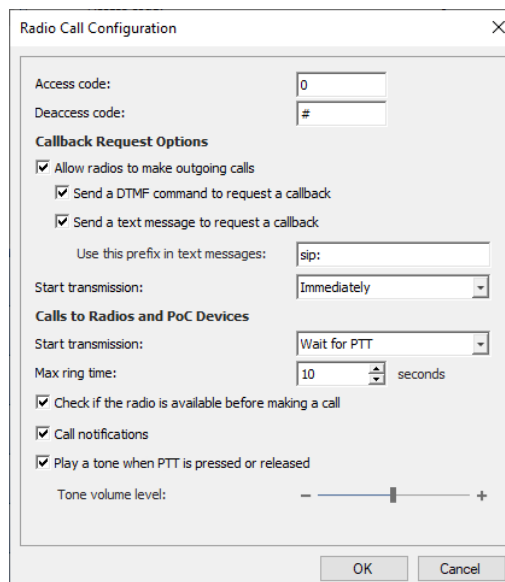

Radio Call Configuration

Access code:

Deaccess code:

Callback Request Options

☒ Allow radios to make outgoing calls

☒ Send a DTMF command to request a callback

☒ Send a text message to request a callback

Use this prefix in text messages:

Start transmission:

Calls to Radios and PoC Devices

Start transmission:

Max ring time: seconds

☒ Check if the radio is available before making a call

☒ Call notifications

☒ Play a tone when PTT is pressed or released

Tone volume level:

OK Cancel

- **Access Code**
Set the value to that configured for the radios as **Access Code** in MOTOTRBO CPS.

- **Deaccess Code**

Set the value to that configured for the radios as **Deaccess Code** in MOTOTRBO CPS.

Callback Request Options

- **Allow radio users to make outgoing calls**

Select this option to enable outgoing phone calls from the radios.

- **Send a DTMF command to request a callback**

Select this option to allow radio users to dial the phone number as a sequence of DTMF tones sent over the radio channel.

- **Send a text message to request a callback**

Select this option to allow radio users to initiate phone calls via sending TMS messages with a specified prefix to the dispatcher.

- **Use this prefix in text messages**

Enter the specific prefix for a text message.

- **Start transmission**

Select the mode for starting transmission on the radio that initiates a call.

- **Wait for answer**

Transmission will be started as soon as the called party answers the call.

- **Immediately**

Transmission will be started immediately that is without waiting for the called party to answer the call.

Calls to Radios and PoC Devices

- **Start transmission**

Select the option how to start transmission on the radio receiving a phone call.

- **Immediately**

Select to start the call immediately.

- **Wait for PTT**

Select to play a ringtone until the radio user presses the PTT.

- **Max ring time**

Specify a timeout that defines how long to attempt to connect to the radio.

- **Check if the radio is available before making a call**

Select this option to execute a Check Radio command before placing a call.

- **Call notifications**


Select this option to send a text message to the radio when the channel is busy and a phone call cannot be established.

- **Play a tone when PTT is pressed or released**

Select this option so that a tone will be played during the established phone call when PTT is pressed or released on the remote radio that doesn't support a Full-Duplex mode.

3.2.2 Inbound Call Configuration

- Click the **Configure** button (5) to set incoming call configuration parameters:

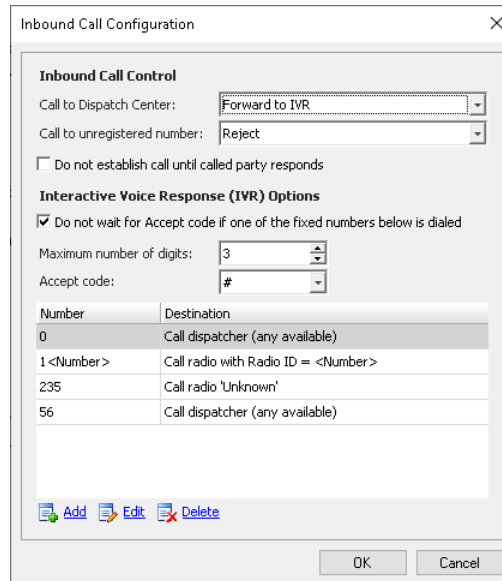

Inbound Call Control

- **Call to Dispatch Center**

Select the mode for handling incoming calls made to the dispatcher.

- **Reject**

All incoming phone calls will be declined.

- **Forward to IVR**

When an incoming call arrives, the phone user will hear Voice Menu commands.

- **Redirect to online dispatchers**

All incoming voice calls will be redirected to all dispatchers of the Dispatch center and any free dispatcher will answer the phone call.

- **Call to unregistered number**

Select the mode for handling incoming calls made from unregistered subscribers.

- **Reject**

Select this option to decline all phone calls from unregistered subscribers.

- **Use this number as Radio ID**

Select this option so that the system will use unregistered numbers as a Radio ID and start a Private Call.

- **Use this number as Internal Phone Number**
Select this option to allow the system to read unregistered numbers according to Voice Menu rules.
- **Forward call to PABX**
Select this option to forward all calls from unregistered numbers to the External PBX.

Interactive Voice Response (IVR) Options


- **Do not wait for Accept code if one of the fixed numbers below is dialed**
Select this option to search for fixed the number in the Extensions table automatically.
When this option is disabled, the subscriber must dial the number according to the following example: **(phone number)#**. The character # (or *, if selected as the Accept code) is used to search for the phone number in the table.
- **Maximum number of digits**
Specify the maximum number of characters allowed in a phone number.
- **Accept Code**
Specify the character that will be used to finish dialing the extension number.

All available numbers are listed in the table below.

- Click the **Add** link to add a number to the table.

To add a static (fixed) number

- Choose **Static number**.

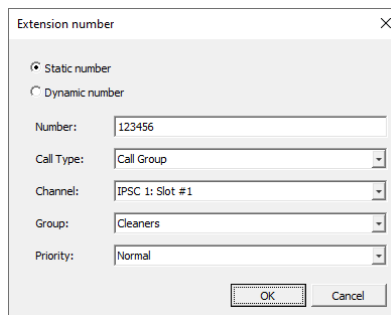


- **Number**
Enter a phone number to add to the table (contact list).
- **Call Type**
Select the call type from the drop-down list.
 - **Call Dispatcher**
Select this type to make a phone call to the dispatcher.
 - **Call Radio**
Select this type to make a phone call to the selected radio.

- **Call Group**
Select this type to make a phone call to the selected group.
- **Call Phone**
Select this type to make a phone call to a phone number.
- **Monitor Radio/Monitor Group/Record Call/Custom Event**
- **Channel**
Select the channel to make a group phone call through (available for Group Calls only).
- **Dispatcher/Radio/Group/Phone/Event ID**
Select the dispatcher, radio, or group depending on what you have selected in the **Call Type** box.
- **Priority**
Select the priority with which the call will be made (available for radio/group/dispatcher calls only).

To add a dynamic number


- Choose **Dynamic number**.

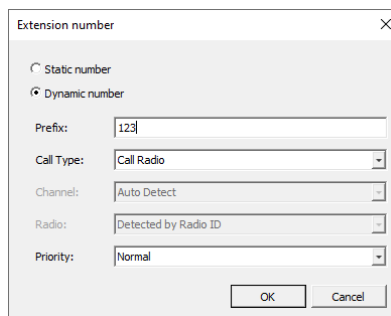

- **Prefix**
Specify a prefix to type in on the keyboard.
- **Call Type**
Select the call type from the drop-down list.
 - **Call Radio**
Select this type to make a phone call to a radio.
 - **Call Group**
Select this type to make a phone call to a group.
 - **Call Phone**
Select this type to make a phone call to a phone number.
 - **Monitor Radio/Monitor Group/Record Call/Custom Event**
- **Channel**
Select the channel to make a group phone call through (available for Group Calls only).
- **Priority**
Select the priority with which the call will be made (available for radio/group/dispatcher calls only).

3.2.3 Conference Configuration

- Click the **Configure** button (6) to set conference parameters:

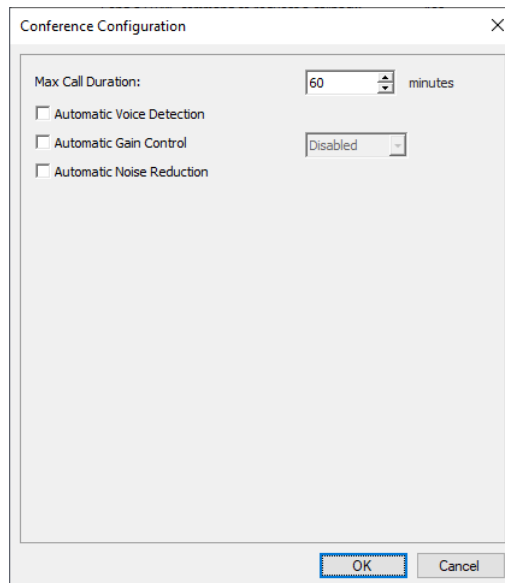

The 'Conference Configuration' dialog box contains the following settings:

- Max Call Duration:** A numeric input field set to 60, followed by a 'minutes' label.
- Automatic Voice Detection:** An unchecked checkbox.
- Automatic Gain Control:** An unchecked checkbox, with a dropdown menu set to 'Disabled'.
- Automatic Noise Reduction:** An unchecked checkbox.


At the bottom right are 'OK' and 'Cancel' buttons.

- Max Call Duration**
 Enter the maximum time allowed for the conference, in minutes.
- Automatic Voice Detection**
 Select this option to enable automatic voice detection during a conference call.
- Automatic Gain Control**
 Select this option to enable automatic gain control during a conference call. In the list on the right, select the desired gain level, in dB.
- Automatic Noise Reduction**
 Select this option to enable automatic noise reduction during a conference call.

3.2.4 Voice Message Loop Settings

- Click the **Configure** button (7) to configure Voice Message Loop Settings:

Note: These settings apply if the Voice Message task is enabled or the Voice Message or Text to Speech actions are selected in an Alarm Management rule.

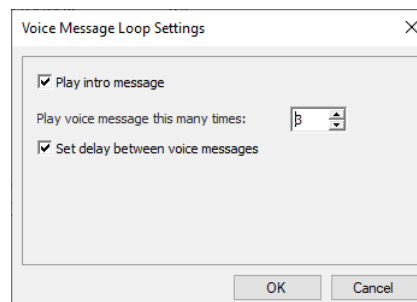

The 'Voice Message Loop Settings' dialog box contains the following settings:


- Play intro message:** A checked checkbox.
- Play voice message this many times:** A numeric input field set to 3.
- Set delay between voice messages:** A checked checkbox.

At the bottom right are 'OK' and 'Cancel' buttons.

- **Play intro message**
Select this option to play an introduction message before playing the voice message itself.
- **Play voice message this many times**
Specify how many times to play the voice message.
- **Set delay between voice messages**
Select this option to set a delay between repeated voice messages.

3.2.5 Phone Calls Options

- On the main menu, click **Tools > Options**.
- In the **Options** dialog box, click the **Phone Calls** tab.

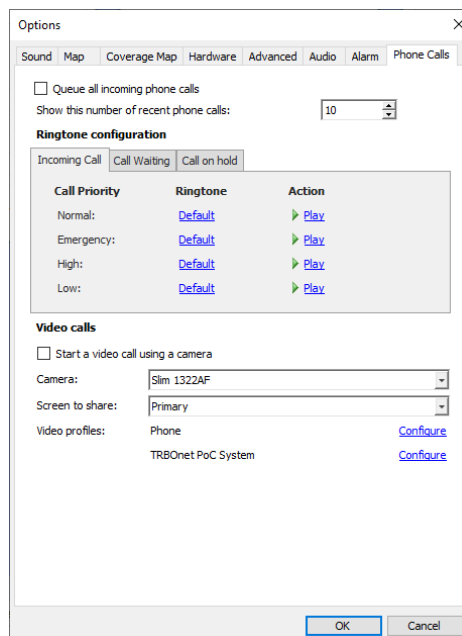

- **Queue all incoming phone calls**
Select this option so that when the phone line is busy, incoming calls will be queued rather than rejected.
- **Show this number of Recent Phone Calls**
Enter the number of items to display in the list of recent calls. The list of recent phone calls appears when you click the arrow on the right of the dial string in the Contact Dialer box.

Ringtone configuration

On the **Incoming Call (Call Waiting)** tab:

- Click a corresponding link in the **Ringtone** column, and from the pull-down menu, select either **Set Default**, **Set Custom**, or **Disable**. If you select **Custom**, in the dialog box that opens, browse for the audio file on the local PC and click **Open**.
- Click a **Play** link in the **Action** column to play back the corresponding ring tone.

On the **Call on Hold** tab:


- **Remind after**
Enter the timeout, in seconds, that will be used for playing the reminder tone when a call is on Hold.
- **Ringtone**
Specify the reminder tone to be played when a call is on Hold.

Video calls

- **Start a video call using a camera**
Select this option so that a video call is started with the camera turned on.
- **Camera**
Select a camera that will be used for video calls.
- **Screen to share**
Select a monitor that will be used to share screen while in a video call.
- **Video profiles**
 - ✓ **Phone**
Click the **Configure** link to configure the settings that will be used for video calls in the Phone system (camera/monitor format, scale, bit rate, frame rate).
 - ✓ **TRBOnet PoC System**
Click the **Configure** link to configure the settings that will be used for video calls in the PoC system (camera/monitor format, scale, bit rate, frame rate).

3.2.6 Adding Extensions

- Go to **Administration** (1), **Phone Calls** (2).
- In the **Phone Calls** pane, click the **Extensions** tab (3), and then **Add** (4).

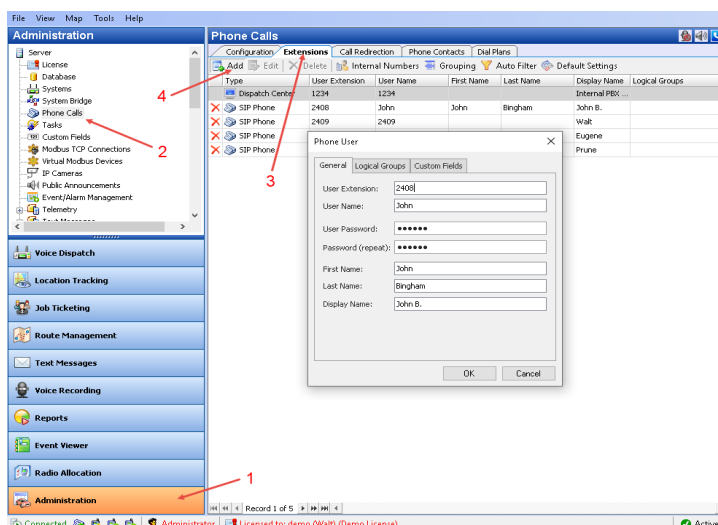


In the **Phone User** dialog box, specify the following parameters:

- **User Extension**
Enter the extension number that will be used by the phone user.
- **User Name**
Enter the user name that will be used by the phone user.
- **User Password**
Enter the password for the phone user to be authenticated by the phone system.
- **Password (repeat)**
Enter the password again.
- **Fist Name/Last Name/Display Name**
Enter the first, last and display names of the phone user.
- In addition, on the **Logical Groups** tab, specify logical groups for the phone user.
- On the **Custom Fields** tab, specify the desired values for the custom fields.

3.2.7 Call Redirection

If a dispatcher doesn't take a phone call within the set period or they have changed their status to unavailable, the call is automatically forwarded to a specified dispatcher, radio, radio group, or phone account. This can be useful during night shifts when no dispatcher is available.

- Click **Administration** (1), **Phone Calls** (2), **Call Redirection** (3), **Add** (4)

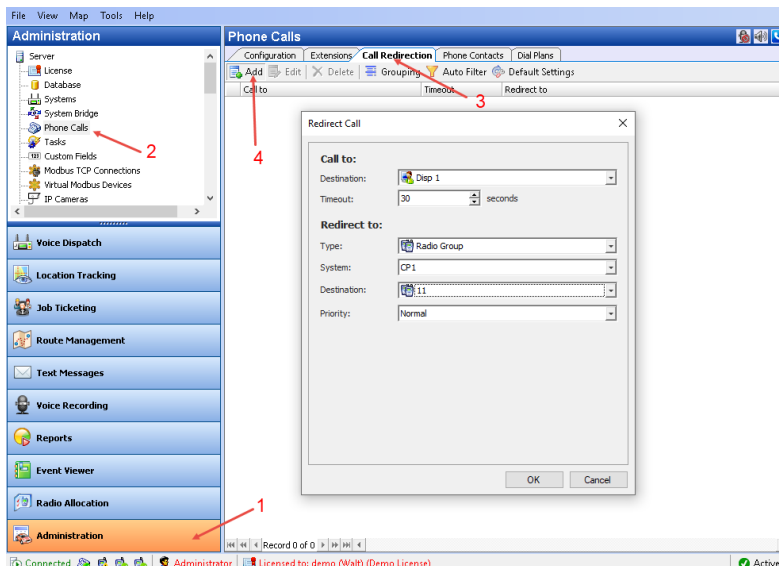

In the Redirect Calls dialog box, specify the following parameters:

Call to

- **Destination**
From the drop-down list, select the dispatcher or dispatcher group.

- **Timeout**

Specify the time period, in seconds, defining how long to wait until the dispatcher answers a call.

Redirect to

- **Type**

From the drop-down list, select one of the following:

- **Decline**

The calls will be declined.

- **Dispatcher**

The calls will be redirected to a specified dispatcher or dispatcher group.

- **Radio unit**

The calls will be redirected to a specified radio.

- **Radio Group**

The calls will be redirected to a specified radio group.

- **Phone account**

The calls will be redirected to a phone account from the phone book.

- **Radio System**

If a radio group is selected as the redirection destination, select the radio system over which to make a call to the specified radio group.

- **Destination**

From the drop-down list, select a particular dispatcher/dispatcher group, radio, radio group, or phone account, depending on what you have selected in the **Type** field.


- **Priority**

Select the priority with which the call will be made over the radio system.

3.2.8 Phone Contacts

In addition to SIP extensions, the phone contacts can also be used in your Phone Connect system.

- Go to **Administration** (1), **Phone Calls** (2).
- In the **Phone Calls** pane, click the **Phone Contacts** tab (3), and then **Add** (4).

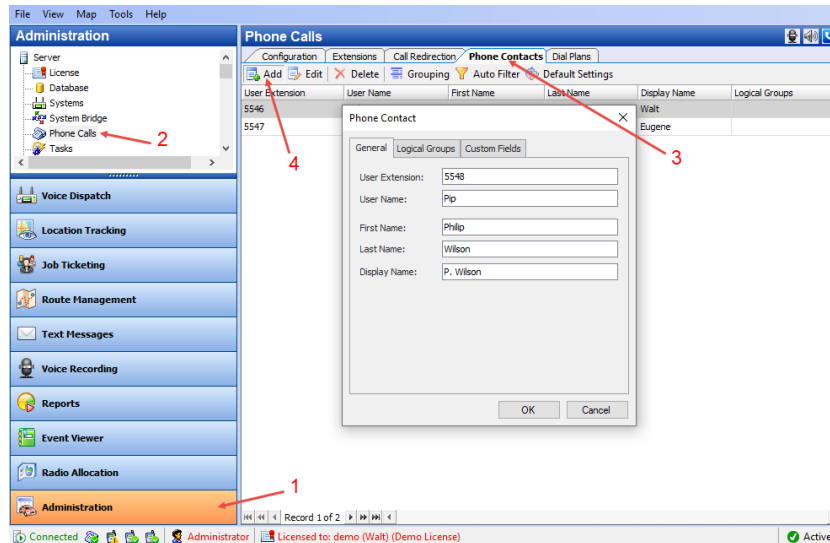


In the **Phone Contact** dialog box, specify the following parameters:

- **User Extension**
Enter the extension number for the phone contact.
- **User Name**
Enter the user name for the phone contact.
- **Fist Name/Last Name/Display Name**
Enter the first, last and display names of the phone contact.
- In addition, on the **Logical Groups** tab, specify logical groups for the phone contact.
- On the **Custom Fields** tab, specify the desired values for the custom fields.

3.2.9 Dial Plans

In order to restrict incoming and outgoing calls as well as set priority for calls, dial plans can be used in your Phone Connect system.


- Go to **Administration** (1), **Phone Calls** (2).
- In the **Phone Calls** pane, click the **Dial Plans** tab (3), and then **Add** (4).

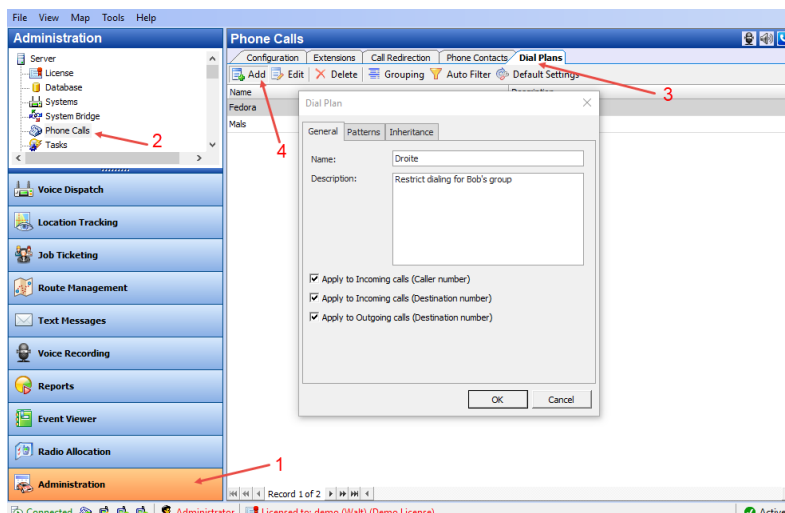


In the **Dial Plan** dialog box, specify the following parameters:

- **Name**
Enter a name for the dial plan.
- **Description**
Enter a description for the dial plan.
- **Apply to Incoming Calls (Caller number)**
Select this check box to apply the dial plan to incoming calls from the numbers specified in the patterns.
- **Apply to Incoming Calls (Destination number)**
Select this check box to apply the dial plan to incoming calls to the numbers specified in the patterns.
- **Apply to Outgoing Calls (Destination number)**
Select this check box to apply the dial plan to outgoing calls to the numbers specified in the patterns.

- Click the **Patterns** tab.

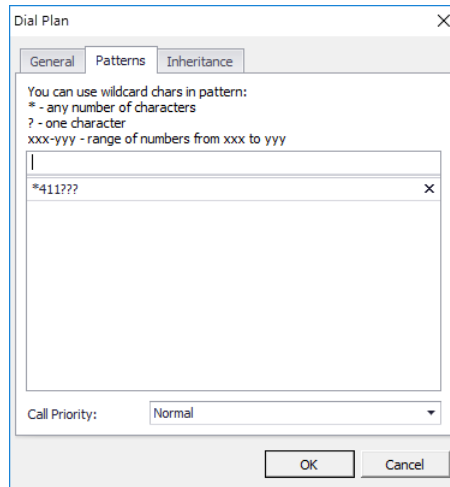

- Specify the pattern that will be used to match the numbers in the dial string or the incoming call numbers.
- **Call Priority**
From the drop-down list, specify the priority for the calls corresponding to the specified patterns.
- Click the **Inheritance** tab.

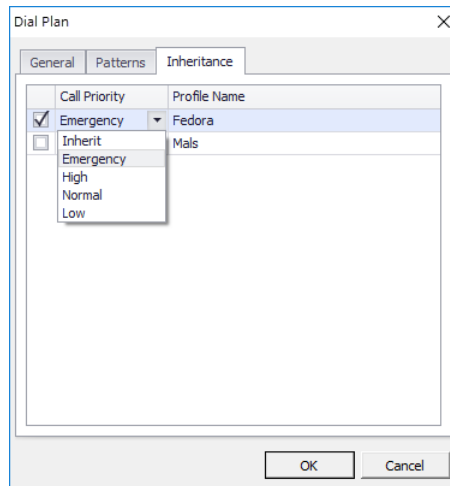

On this tab, you can select the profiles to include in the dial plan you are adding/editing.

- **Call Priority**
From the drop-down list, select the priority for the inherited dial plan.

3.3 MOTOTRBO CPS


This section describes how to configure MOTOTRBO repeaters and radios using MOTOTRBO CPS.

3.3.1 Repeater

Note: The Motorola's Digital Phone Patch license is not required for repeaters.

If the NAI protocol is used in your radio system, then:


- In the **Set Categories** pane, select **Zone/Channel Assignment> Zone>Zone Items>Channel**.
- In the right pane, select the **Network Application Interface Phone** check box.

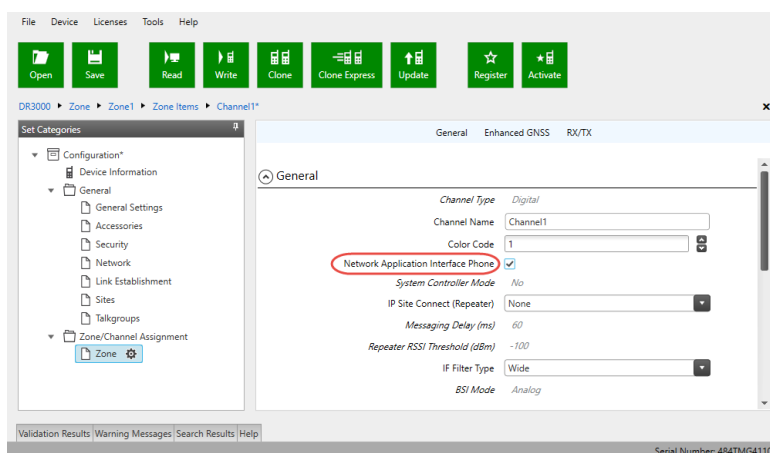


3.3.2 Subscriber Radio

3.3.2.1 Motorola Phone System


- In the **Set Categories** pane, select **Systems > Phone Systems**.
- In the right pane, click the plus sign button and add the corresponding phone system.
- In the left pane, select the phone system you have added.

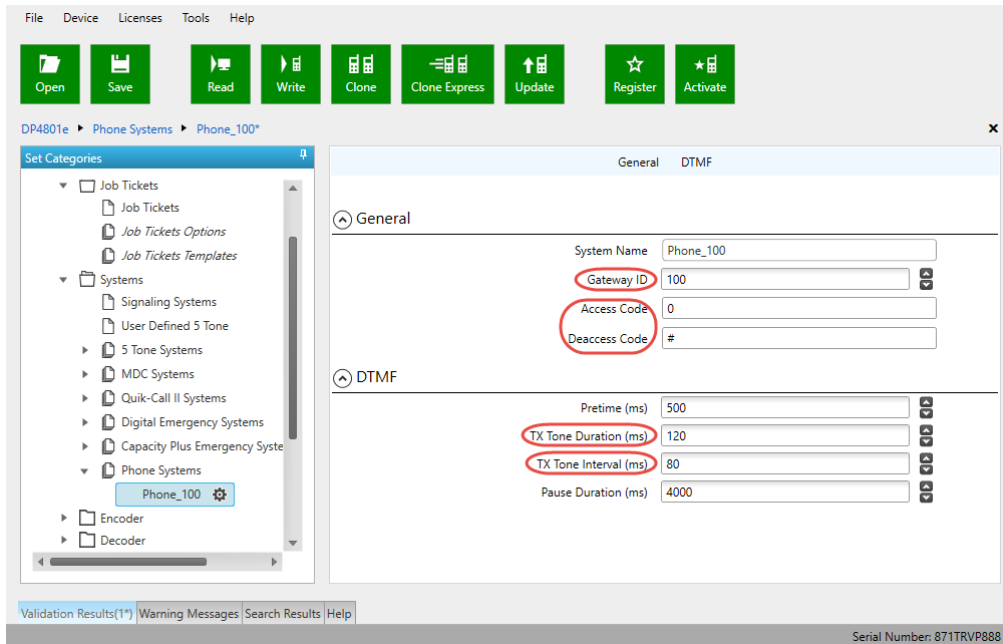

- In the right pane, specify the following parameters:
 - **Gateway ID**
Enter the same ID as **TRBOnet Peer ID** in the Repeater settings of TRBOnet Server.

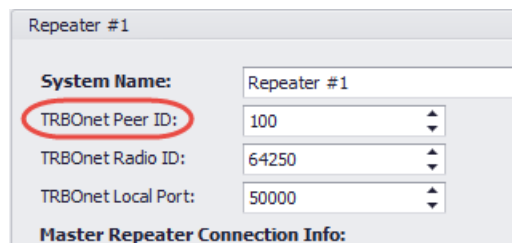

- **Access Code and Deaccess Code**
These codes must be the same on all the radios and reflect the corresponding values set in the Dispatch Console.
- **TX Tone Duration (ms)**
Enter the duration of the DTMF tone digits, in milliseconds, for the phone system. It is recommended to set this value to **120**.
- **TX Tone Interval (ms)**
Enter the duration of the intervals between the DTMF tone digits in a transmission sequence, in milliseconds, for the phone system. It is recommended to set this value to **80**.
- In the **Set Categories** pane, select **Zone/Channel Assignment>Zone>Zone Items>Channel**.

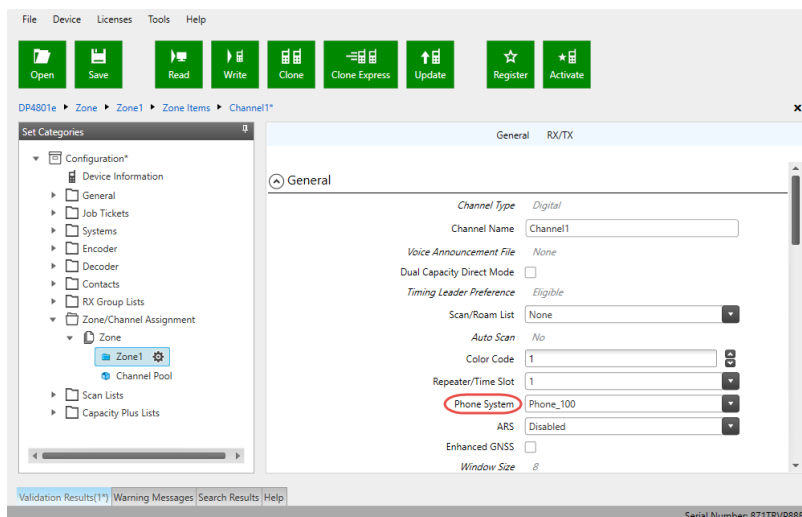


- In the right pane:
 - **Phone System**
Select the phone system you have previously specified.


3.3.2.2 TRBOnet Phone System

If your radio system uses TRBOnet Phone System, make sure that the following parameters are appropriately configured in the radios that are used as control stations and subscriber radios.

- In the **Set Categories** pane, select **General > GeneralSettings**

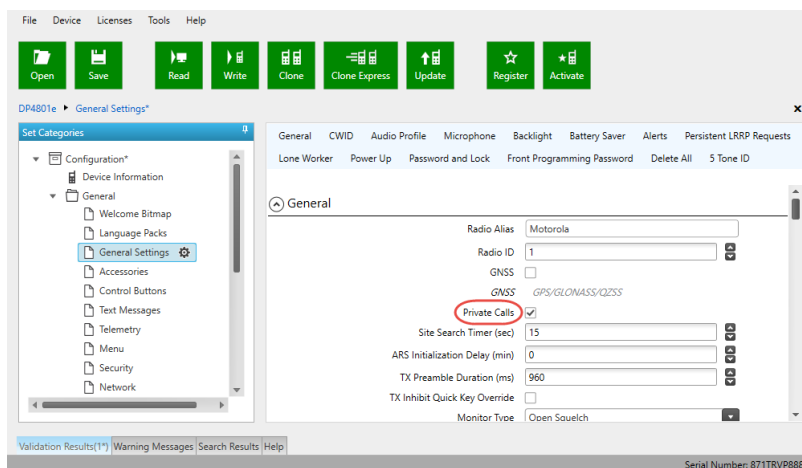

- In the right pane, make sure the **Private Calls** check box is selected.
- In the **Set Categories** pane, select **Zone/Channel Assignment > Zone > Zone Items > Channel**.

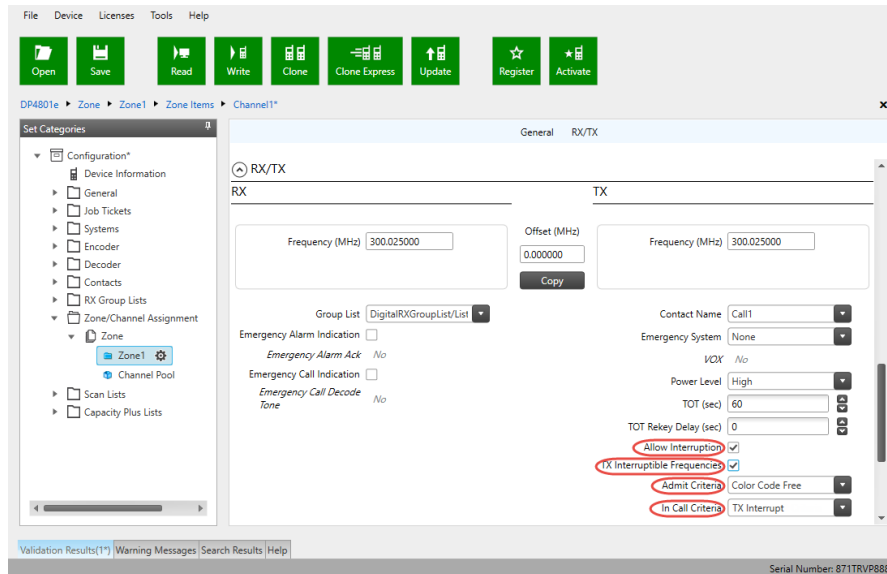

- In the right pane, navigate go to **RX/RTX** section.
- Select both the **Allow Interruption** and **TX Interruptible Frequencies** check boxes.
- From the **Admit Criteria** drop-down list, select 'Color Code Free'.
- From the **In Call Criteria** drop-down list, select 'TX Interrupt'.
If the radio will be used as a control station, select 'Follow Admit Criteria'.

Making calls from radios

When TRBOnet Phone System is used, making phone calls from a radio can be done in two ways:

1. While pressing and holding the PTT key, dial a number ending with a **#**. Then release the PTT key. For example, **700#**.
 2. Send a private message to the dispatcher in the format *sip:phone_number*, for example, **sip:700**.
- To terminate the phone call, press and hold the PTT key, press the **#** key, and then release the PTT key.